


## DMX MP3 VMusic2 Player

Programming

### DMX - MP3 VMusic Player Programming

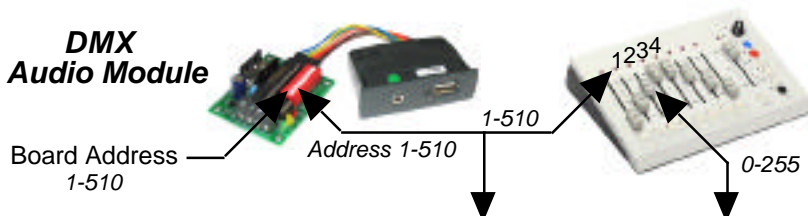

<b>CH1</b>	0- 63	Stop/Reset Playback
	64-191	Start Playback
<b>CH2</b>	0- 255	Audio Track 1-32
<b>CH3</b>	0- 255	Audio Volume L-Ch 0 = Mute
<b>CH4</b>	0- 255	Audio Volume R-Ch 0 = Mute

The DMX-VMusic2 controller requires 2 consecutive control channels for each Audio Track selected. (1-Reset Playback, 2-Select Audio Channel, 3-Start Playback)

STEPS	Audio Track	DMX Addrss Channel	DMX Value 0-255	Event Description
1	Audio Volume	Channel- 3 Channel- 4	255 255 0=Mute	L Audio Volume - FULL UP R Audio Volume - FULL UP
2	Track 1 PLAY	Channel- 1 Channel- 2 Channel- 1	0-63 0-7 64-191	Stop / Reset Audio Playback Audio Track-1 (001.MP3) Start Audio Playback Track -1
3	Wait for Audio Track-1 to Stop Playback (Board LED - Yellow OFF)			
2	Track 2 PLAY	Channel- 1 Channel- 2 Channel- 1	0-63 8-15 64-191	Stop / Reset Audio Playback Audio Track-2 (002.MP3) Start Audio Playback Track -2
3	Wait for Audio Track-2 to Stop Playback (Board LED - Yellow OFF)			
2	Track 3 PLAY	Channel- 1 Channel- 2 Channel- 1	0-63 16-23 64-191	Stop / Reset Audio Playback Audio Track-3 (003.MP3) Start Audio Playback Track -3
3	Wait for Audio Track-3 to Stop Playback (Board LED - Yellow OFF)			
2	Track 4 PLAY	Channel- 1 Channel- 2 Channel- 1	0-63 24-31 64-191	Stop / Reset Audio Playback Audio Track-4 (004.MP3) Start Audio Playback Track -4
3	Wait for Audio Track-4 to Stop Playback (Board LED - Yellow OFF)			
2	Track 5 PLAY	Channel- 1 Channel- 2 Channel- 1	0-63 32-39 64-191	Stop / Reset Audio Playback Audio Track-5 (005.MP3) Start Audio Playback Track -5
3	Wait for Audio Track-5 to Stop Playback (Board LED - Yellow OFF)			
2	Track 6 PLAY	Channel- 1 Channel- 2 Channel- 1	0-63 40-47 64-191	Stop / Reset Audio Playback Audio Track-6 (006.MP3) Start Audio Playback Track -6


Each Playback Channel must be reset before the next playback track can be activated.

Copyright © 2011 Blue Point Engineering, All Rights Reserved

Custom Equipment, Unique Electronic Products

Blue Point Engineering


Phone (303) 651-3794 (MST)  
www.BPEolutions.com

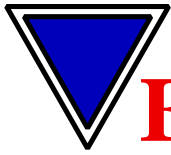

## DMX - MP3 VMusic Player Programming Cont.

STEPS	3		Wait for Audio Track-6 to Stop Playback (Board LED - Yellow OFF)		
	2	PLAY	Track 7	Channel- 1    0-63	Stop / Reset Audio Playback
				Channel- 2    48-55	Audio Track-7 (007.MP3)
				Channel- 1    64-191	Start Audio Playback Track -7
	3		Wait for Audio Track-7 to Stop Playback (Board LED - Yellow OFF)		
	2	PLAY	Track 8	Channel- 1    0-63	Stop / Reset Audio Playback
				Channel- 2    56-63	Audio Track-8 (008.MP3)
				Channel- 1    64-191	Start Audio Playback Track -8
	3		Wait for Audio Track-8 to Stop Playback (Board LED - Yellow OFF)		
	2	PLAY	Track 9	Channel- 1    0-63	Stop / Reset Audio Playback
				Channel- 2    64-71	Audio Track-9 (009.MP3)
				Channel- 1    64-191	Start Audio Playback Track -9
	3		Wait for Audio Track-9 to Stop Playback (Board LED - Yellow OFF)		
	2	PLAY	Track 10	Channel- 1    0-63	Stop / Reset Audio Playback
				Channel- 2    72-79	Audio Track-10 (010.MP3)
			Channel- 1    64-191	Start Audio Playback Track -10	
3		Wait for Audio Track-10 to Stop Playback (Board LED - Yellow OFF)			
2	PLAY	Track 11	Channel- 1    0-63	Stop / Reset Audio Playback	
			Channel- 2    80-87	Audio Track-11 (011.MP3)	
			Channel- 1    64-191	Start Audio Playback Track -11	
3		Wait for Audio Track-11 to Stop Playback (Board LED - Yellow OFF)			
2	PLAY	Track 12	Channel- 1    0-63	Stop / Reset Audio Playback	
			Channel- 2    88-95	Audio Track-12 (012.MP3)	
			Channel- 1    64-191	Start Audio Playback Track -12	
3		Wait for Audio Track-12 to Stop Playback (Board LED - Yellow OFF)			
2	PLAY	Track 13	Channel- 1    0-63	Stop / Reset Audio Playback	
			Channel- 2    96-103	Audio Track-13 (013.MP3)	
			Channel- 1    64-191	Start Audio Playback Track -13	
3		Wait for Audio Track-13 to Stop Playback (Board LED - Yellow OFF)			
2	PLAY	Track 14	Channel- 1    0-63	Stop / Reset Audio Playback	
			Channel- 2    104-111	Audio Track-14 (014.MP3)	
			Channel- 1    64-191	Start Audio Playback Track -14	
3		Wait for Audio Track-14 to Stop Playback (Board LED - Yellow OFF)			
2	PLAY	Track 15	Channel- 1    0-63	Stop / Reset Audio Playback	
			Channel- 2    112-119	Audio Track-15 (015.MP3)	
			Channel- 1    64-191	Start Audio Playback Track -15	


Copyright © 2011 Blue Point Engineering, All Rights Reserved

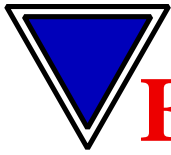

## DMX - MP3 VMusic Player Programming Cont.

STEPS	3	Wait for Audio Track-15 to Stop Playback (Board LED - Yellow OFF)		
	2	PLAY	Track 16	Channel- 1      0-63      Stop / Reset Audio Playback
	2			Channel- 2      120-127      Audio Track-16 (016.MP3)
	2			Channel- 1      64-191      Start Audio Playback Track -16
	3	Wait for Audio Track-16 to Stop Playback (Board LED - Yellow OFF)		
	2	PLAY	Track 17	Channel- 1      0-63      Stop / Reset Audio Playback
	2			Channel- 2      128-135      Audio Track-17 (017.MP3)
	2			Channel- 1      64-191      Start Audio Playback Track -17
	3	Wait for Audio Track-17 to Stop Playback (Board LED - Yellow OFF)		
	2	PLAY	Track 18	Channel- 1      0-63      Stop / Reset Audio Playback
	2			Channel- 2      136-143      Audio Track-18 (018.MP3)
	2			Channel- 1      64-191      Start Audio Playback Track -18
	3	Wait for Audio Track-18 to Stop Playback (Board LED - Yellow OFF)		
	2	PLAY	Track 19	Channel- 1      0-63      Stop / Reset Audio Playback
	2			Channel- 2      144-151      Audio Track-19 (019.MP3)
	2			Channel- 1      64-191      Start Audio Playback Track -19
	3	Wait for Audio Track-19 to Stop Playback (Board LED - Yellow OFF)		
	2	PLAY	Track 20	Channel- 1      0-63      Stop / Reset Audio Playback
	2			Channel- 2      152-159      Audio Track-20 (020.MP3)
	2			Channel- 1      64-191      Start Audio Playback Track -20
	3	Wait for Audio Track-20 to Stop Playback (Board LED - Yellow OFF)		
	2	PLAY	Track 21	Channel- 1      0-63      Stop / Reset Audio Playback
	2			Channel- 2      160-167      Audio Track-21 (021.MP3)
	2			Channel- 1      64-191      Start Audio Playback Track -21
3	Wait for Audio Track-21 to Stop Playback (Board LED - Yellow OFF)			
2	PLAY	Track 22	Channel- 1      0-63      Stop / Reset Audio Playback	
2			Channel- 2      168-175      Audio Track-22 (022.MP3)	
2			Channel- 1      64-191      Start Audio Playback Track -22	
3	Wait for Audio Track-22 to Stop Playback (Board LED - Yellow OFF)			
2	PLAY	Track 23	Channel- 1      0-63      Stop / Reset Audio Playback	
2			Channel- 2      176-183      Audio Track-23 (023.MP3)	
2			Channel- 1      64-191      Start Audio Playback Track -23	
3	Wait for Audio Track-23 to Stop Playback (Board LED - Yellow OFF)			
2	PLAY	Track 24	Channel- 1      0-63      Stop / Reset Audio Playback	
2			Channel- 2      184-191      Audio Track-24 (024.MP3)	
2			Channel- 1      64-191      Start Audio Playback Track -24	

Copyright © 2011 Blue Point Engineering, All Rights Reserved

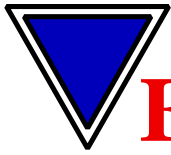

## DMX - MP3 VMusic Player Programming Cont.

STEPS	3	Wait for Audio Track-24 to Stop Playback (Board LED - Yellow OFF)		
	2	PLAY	Track 25	Channel- 1      0-63      Stop / Reset Audio Playback
				Channel- 2      192-199      Audio Track-25 (025.MP3)
				Channel- 1      64-191      Start Audio Playback Track -25
	3	Wait for Audio Track-25 to Stop Playback (Board LED - Yellow OFF)		
	2	PLAY	Track 26	Channel- 1      0-63      Stop / Reset Audio Playback
				Channel- 2      200-207      Audio Track-26 (026.MP3)
				Channel- 1      64-191      Start Audio Playback Track -26
	3	Wait for Audio Track-26 to Stop Playback (Board LED - Yellow OFF)		
	2	PLAY	Track 27	Channel- 1      0-63      Stop / Reset Audio Playback
				Channel- 2      208-215      Audio Track-27 (027.MP3)
				Channel- 1      64-191      Start Audio Playback Track -27
3	Wait for Audio Track-27 to Stop Playback (Board LED - Yellow OFF)			
2	PLAY	Track 28	Channel- 1      0-63      Stop / Reset Audio Playback	
			Channel- 2      216-223      Audio Track-28 (028.MP3)	
			Channel- 1      64-191      Start Audio Playback Track -28	
3	Wait for Audio Track-28 to Stop Playback (Board LED - Yellow OFF)			
2	PLAY	Track 29	Channel- 1      0-63      Stop / Reset Audio Playback	
			Channel- 2      224-231      Audio Track-29 (029.MP3)	
			Channel- 1      64-191      Start Audio Playback Track -29	
3	Wait for Audio Track-29 to Stop Playback (Board LED - Yellow OFF)			
2	PLAY	Track 30	Channel- 1      0-63      Stop / Reset Audio Playback	
			Channel- 2      232-239      Audio Track-30 (030.MP3)	
			Channel- 1      64-191      Start Audio Playback Track -30	
3	Wait for Audio Track-30 to Stop Playback (Board LED - Yellow OFF)			
2	PLAY	Track 31	Channel- 1      0-63      Stop / Reset Audio Playback	
			Channel- 2      240-247      Audio Track-31 (031.MP3)	
			Channel- 1      64-191      Start Audio Playback Track -31	
3	Wait for Audio Track-31 to Stop Playback (Board LED - Yellow OFF)			
2	PLAY	Track 32	Channel- 1      0-63      Stop / Reset Audio Playback	
			Channel- 2      248-255      Audio Track-32 (032.MP3)	
			Channel- 1      64-191      Start Audio Playback Track -32	
3	Wait for Audio Track-32 to Stop Playback (Board LED - Yellow OFF)			

Copyright © 2011 Blue Point Engineering. All Rights Reserved

Custom Equipment, Unique Electronic Products

Blue Point Engineering

Phone (303) 651-3794 (MST)  
www.BPEsolutions.com