

Auto Talk Board

Large Servo Setup

WARNING

The AutoTalk can operate micro servos to any standard size servos. For operation of large digital servo or analog quarter scale servo or bigger, the connected servo must be operated from it's own power supply and controlled from the AutoTalk PWM signal.

